



Quick Guide



For PDF Installation guide please go to www.salus-manuals.com
 Issue Date: Oct 2019
 V020
 SALUS Controls is a member of the Computime Group.
 Maintaining a policy of continuous product development SALUS Controls plc reserve the right to change specification, design and materials of products listed in this brochure without prior notice.



Computime

www.salus-tech.com

E: sales@salus-tech.com
 E: techsupport@salus-tech.com
 T: +44 (0) 1226 323961
 Barnsley S75 3SF, UK
 Whinby Road, Dodworth,
 Dodworth Business Park South,
 SALUS House
 SALUS Controls plc

Introduction

The RT510WBC+ thermostat will switch your heating system on or off, as needed, in accordance with the time and temperature set by you. It can be used with the RXWBC605 integral plug-in RF boiler control. The RF boiler control is a direct replacement for the basic time clock or blanking plate usually supplied with the boiler. Installing the RF boiler control takes minutes. Once installed, you will benefit from all the control features of the RT510WBC+ thermostat.

Product Compliance

This product complies with the essential requirements and other relevant provisions of the following EU Directives: EMC 2014/30/EU, LVD 2014/35/EU, RED 2014/53/EU and RoHS 2011/65/EU. Full text of the EU Declaration of Conformity is available on www.saluslegal.com

868.0-868.6MHz; <13dBm

Safety Information

Use in accordance with the regulations. Indoor use only. Keep your device completely dry. Disconnect your device before cleaning it with a dry cloth. This accessory must be fitted by a competent person, and installation must comply with the guidance, standards and regulations applicable to the city, country or state where the product is installed. Failure to comply with the relevant standards could lead to prosecution.





Always isolate the AC Mains supply before installing or working on any components that require 230 VAC 50Hz supply.

Box content




RXWBC605 Installation

- 1 Switch off the boiler at its main supply. Remove the outer casing and front fascia to allow access to the main control panel.
- 2 Remove cover panel A upwards to remove.
- 3 Pull top tab B upwards, then outwards to remove blanking plate or existing control.

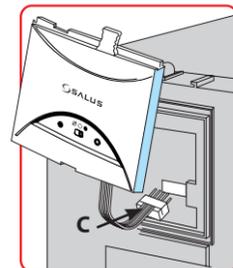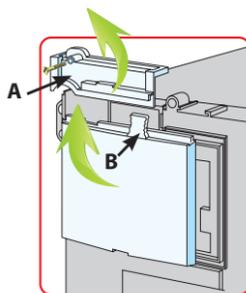


- 4 First plug in the connector block C ensuring correct orientation. Remember to ensure the block is fully connected.

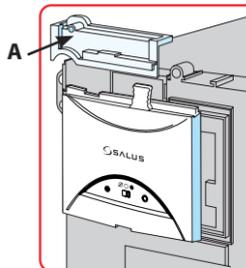

- 5 Now locate the boiler control's four hooks then press in and down. Replace Cover panel A.
 - 6 Replace the front fascia and boiler's outer casing.
 - 7 Before switching the boiler on at its mains supply, ensure the module switch is in the **OFF** position \emptyset .
- i** Boiler may fire up on pre-heat mode on first turn on. If it does, it is advisable to temporarily turn off your pre-heat until installation is complete.
- 8 To ensure the boiler control is connected properly, please now move the switch to **MANUAL ON** \bullet . The boiler should now Fire and the LED on your boiler control should illuminate.
 - 9 Now move the switch back to **AUTO** \circ .


RXWBC605 User Controls

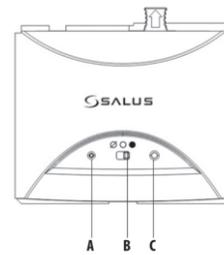


- A** – LED This LED will be on when the thermostat is demanding heat.
- B** – Mode Switch: MANUAL ON / AUTO / OFF
- C** – SYNC Button - This is used only for pairing the RF communications.

RXWBC605 Switch Position

 
When the switch on the Boiler Module is in the **AUTO** position, the boiler control will automatically receive the RF signal from the thermostat and control the module output so that it switches the boiler accordingly.



 The user can also move the switch to the **MANUAL ON** position; when in this mode, the boiler will be always turned on and the LED indicator will also be lit constantly.



 The user can also move the switch to the **OFF** position; when in this mode, the boiler will not receive a signal from the RF thermostat.




RT510WBC+ (Thermostat) Button Functions

| Key | Function |
|--------------|--|
| | 1. Press once to activate Frost Mode 2. Press for 3 seconds in order to activate Holiday Mode |
| +Hr | Press once to activate/deactivate Boost function |
| | Press once to enter/exit Permanent Override function |
| ^ | Increase button |
| v | Decrease button |
| SELECT | Select the clock or programme settings |
| SET | Press to confirm your settings |
| | 1. Press once to enter/exit in Test Mode 2. Press for 3 seconds to enter/exit Pairing Mode |
| | Press the buttons for 3 seconds to enter Installer Mode |
| SELECT + SET | Press the buttons for 3 seconds to enter Clock Settings |

RT510WBC+ (Thermostat) Dip Switch Settings


The DIP Switches can be found on the rear of your thermostat. For all plug-in boiler receiver applications ensure SW1 is set to RAD.

| Control feature | ITLC | SPAN |
|-----------------|--|--|
| Operation | When ITLC is selected on DIP switch № 2, the DIP switch № 1 is functional. You can choose between radiator or electric heater. | When Span is selected on DIP switch № 2, the DIP switch № 1 is not functional. |

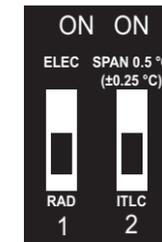

Test the Pairing Process

i During test pairing, boiler control should flash confirming pair. If not, please follow Pairing Process.


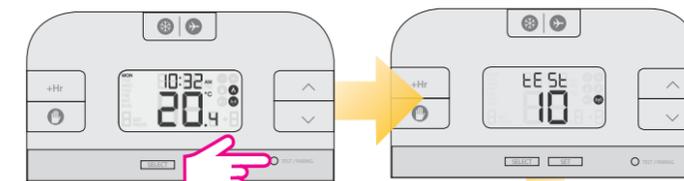


i When enter test pairing mode, after a 10 minute countdown the thermostat will time out.




Pairing Process

 
- 1 Ensure the switch on the RF integral boiler module is in the **AUTO** position.
- 2 Gently press and hold the SYNC button with a blunt object. After 3 seconds the Boiler Control LED will flash once every second to indicate it is ready to pair and ready to receive a signal from the thermostat.

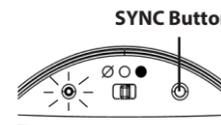

- 3 Begin the pairing process

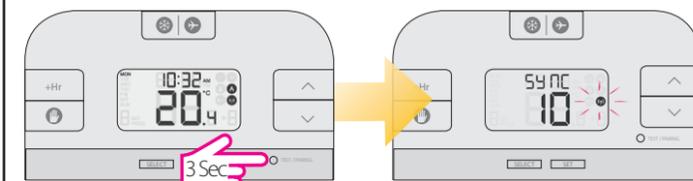

- 4 End the pairing process

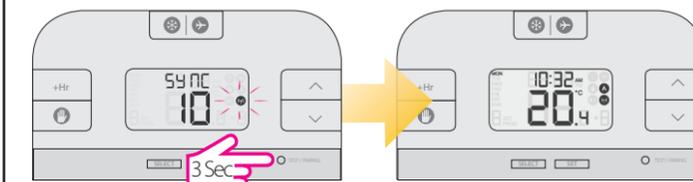

Once the red LED on your receiver stops flashing, press the TEST / PAIRING button for 3 sec.

i Once paired please close the boiler control panel.

Setting Time and Date



Press the buttons together for 3 sec.



Press UP or DOWN to select the hour format and then press SELECT to confirm your option.




Press UP or DOWN to select the hour and then press SELECT to confirm your option.



Press UP or DOWN to select the minutes and then press SELECT to confirm your option.



Press SET to return to the Main Screen.

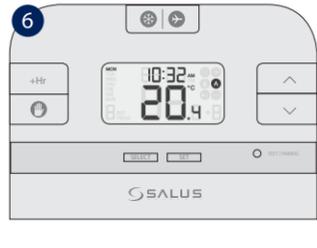

Continue with the same steps for setting the Day.


Programming

You can create personalized programmes for your controller. You have the option to choose between a 5-2 days programme or a daily one by using the parameter d04 from Installer mode.


| 5-2 Days Programme | 24h Programme |
|------------------------------------|--------------------------------|
| Weekdays 6 sets of time/channel | 24h 6 sets of time/channel |
| Weekends 6 sets of time/channel | |
| Total: 12 settings/week | Total: 42 settings/week |




Press SET to change your programmes.

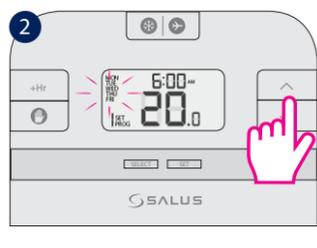


Press UP or DOWN to select Weekday/Weekend/Day and press SELECT.

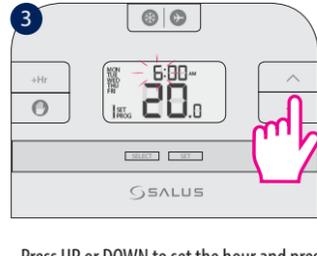


Press UP or DOWN to set the hour and press SELECT to confirm your option.

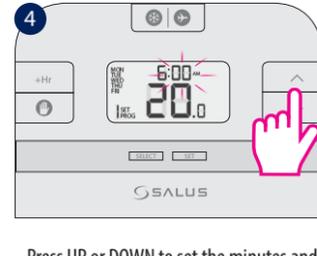

Press UP or DOWN to set the minutes and press SELECT to confirm your option.

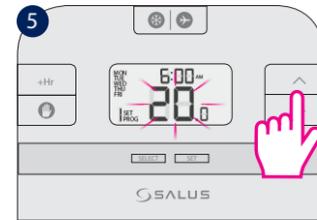

Press UP or DOWN to set the temperature and press SELECT to confirm your option.

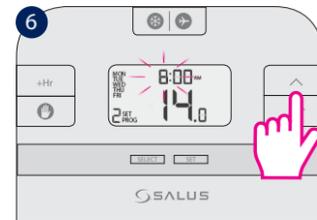


Follow the same procedure for the next set of time.

i After you have done all the changes, please press SET to confirm all your choices and to return to the Main Screen.

Review the Setpoint (desired) temperature




Actual room temperature

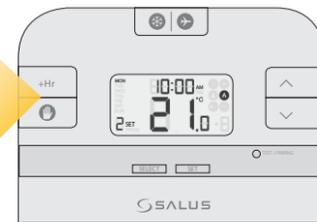


Setpoint (desired) temperature


Temporary Override

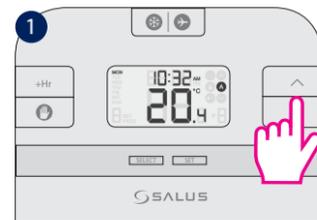

Press UP or DOWN to review the setpoint temperature.

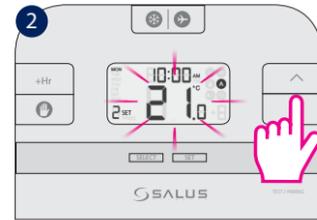

Press UP or DOWN to set the temperature.

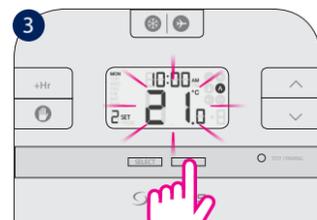


Press SET to confirm the changes.




Permanent Override



Press OVERRIDE in order to activate the mode.

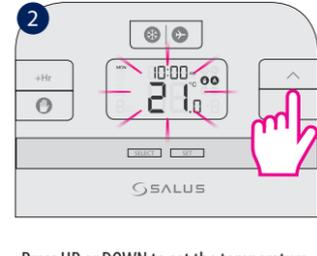

Press UP or DOWN to set the temperature.

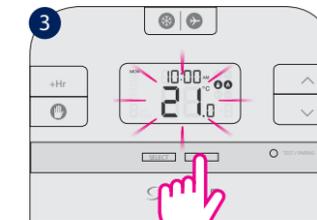


Press SET to confirm the changes.




The Override sign will appear on the Main screen.

Boost function

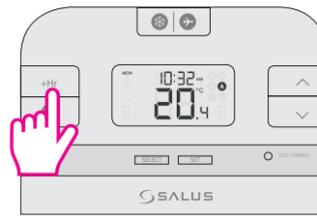


Press +Hr to activate the Boost function.

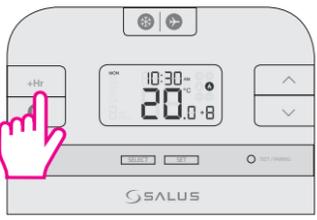

Press +Hr to set boost hours and then press UP or DOWN to set the boost temperature for your boost period.


Frost protection

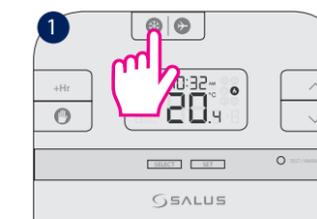

Press the FROST button once to activate the function.



Frost Mode ON.

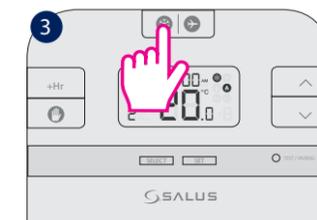


Press the FROST button once to deactivate the function.




Frost Mode OFF.

i The Frost protection temperature can be reviewed by pressing the UP button once, but can only be changed in Installer Mode.


Holiday Mode

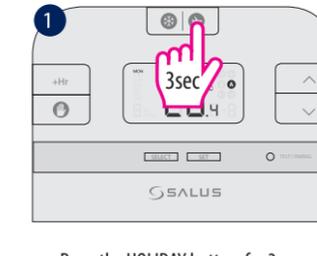


Press the HOLIDAY button for 3 sec.

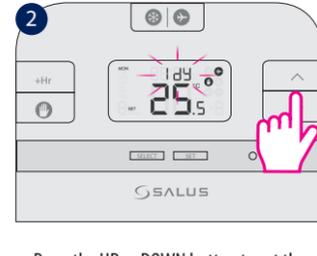

Press the UP or DOWN button to set the Holiday period.

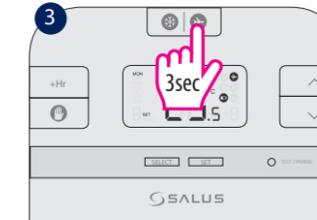


Press the HOLIDAY button for 3 sec to exit Holiday Mode.

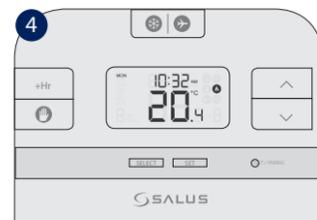

i You can also exit Holiday Mode by setting the days to zero.

Installer Mode

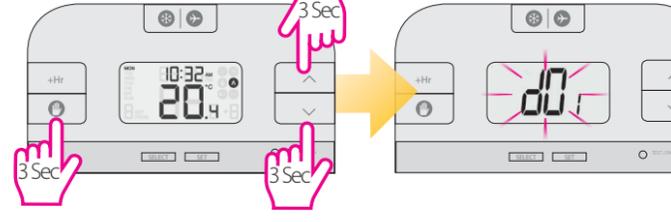

Press the three buttons simultaneously for 3 seconds.

| dxx | Function | Parameter | Default value |
|-----|---------------------------------------|-------------------|---------------|
| d01 | Temperature display increments | 0.1°C or 0.5°C | 0.5°C |
| d02 | Temperature offset | +/- 3.0°C | 0.0°C |
| d03 | Frost Protection setpoint temperature | 5.0°C - 17.0°C | 5.0°C |
| d04 | Programmer selection | 5/2 or 24 hr (7d) | 5/2 d |

Reset function RT510WBC+

Remove the batteries without pressing any button. Wait 2 minutes and insert the batteries again. Your device will be restarted.

Changing your Batteries / Blank Screen

If you do not notice the "low battery" symbol displayed on the screen in time, it will shut down. In this case, after removing the old batteries, it is necessary to wait 5 minutes before inserting the new batteries. Otherwise, it is possible that the internal circuit will remain partially discharged and it can prevent the thermostat from restarting.

i When you want to change the batteries your device will use the internal memory to backup your settings. You have 30 seconds to change the batteries before losing your settings.