


WLS600 - Wiring diagram.

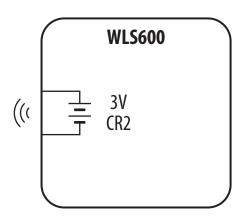

≡ Battery powered

L, N 230V AC power supply

Fuse

COM, NO, NC Voltage free output

S, S1, S2 Input terminals

SL 230V AC voltage output

Contact normally open

Contact normally closed

NC/COM/NO switch

•

Boiler - Boiler connection * - Boiler's contacts for ON/OFF thermostat (according to the boiler's instructions)

(Wireless communication

Pump

Valve actuator



Temperature sensor



3-speed 230V AC fan



Light bulb or other load



Thermoelectric actuator





Time programmer



External normally open contact



Voltage converter

