
 


 






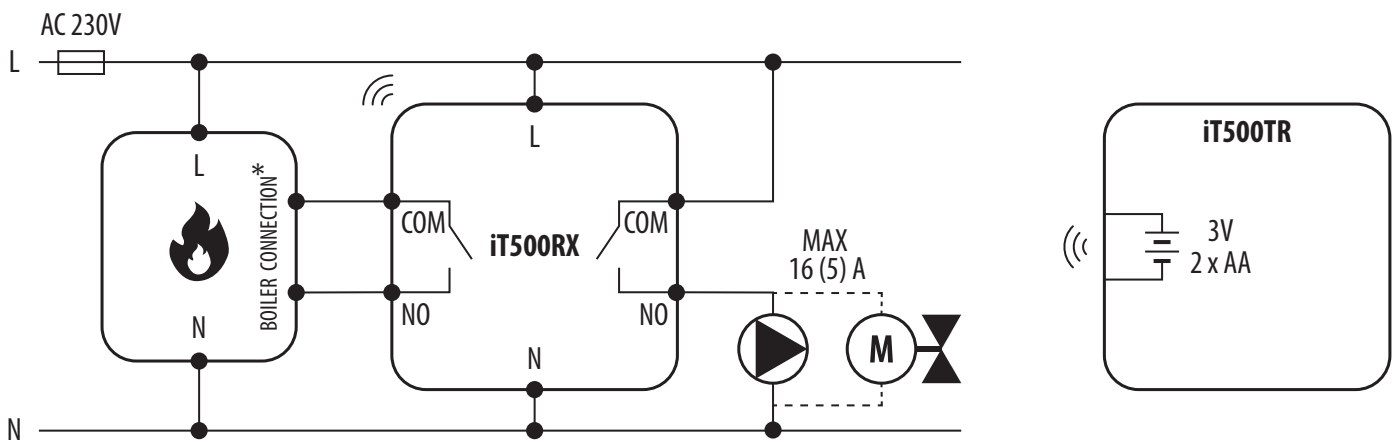




 


# xT500 - Wiring diagram.



## LEGEND

|   |   |   |                                |
|---|---|---|--------------------------------|
|  | Battery powered   |  | Wireless communication         |
| L, N  | 230V AC power supply  |  | Pump                           |
|  | Fuse  |  | Valve actuator                 |
| COM, NO, NC   | Voltage free output   |  | Temperature sensor             |
| S, S1, S2   | Input terminals   |  | 3-speed 230V AC fan            |
| SL  | 230V AC voltage output  |  | Light bulb or other load       |
|  | Contact normally open   |  | Thermoelectric actuator        |
|  | Contact normally closed   |  | Time programmer                |
|  | NC/COM/NO switch  |  | External normally open contact |
|  | Boiler - Boiler connection * - Boiler's contacts for ON/OFF thermostat (according to the boiler's instructions) |  | Voltage converter              |