



MULTI-LANGUAGE
MANUAL



Quick guide

Manufacturer: SALUS Controls plc
Units 8-10, Northfield Business Park,
Forge Way, Parkgate Rotherham,
S60 1SD, United Kingdom

Importer: Salus Controls European
Distribution sp.z o.o.
ul. Szamocka 8, piętro 6., 01 748
Warszawa, Poland

Email: technicalsupport@saluscontrols.fr



www.saluscontrols.com



SALUS Controls is a member of the Computime Group.
In line with its policy of continuous product development, SALUS Controls plc reserves
the right to amend the specifications, design and materials of the products featured in
this brochure without prior notice.

08/2026


Description of the cabling centre

1. Cartridge fuse 5 × 20 mm 2 A
2. Power supply
3. Diodes
4. NSB (Night Set Back reduction) function
5. Thermostats connection

6. Actuators connection
- 7A. PL06 - pump (or boiler) control module
- 7B. PL07 - pump and boiler control module
8. Serial connector for the PL06 and PL07 modules

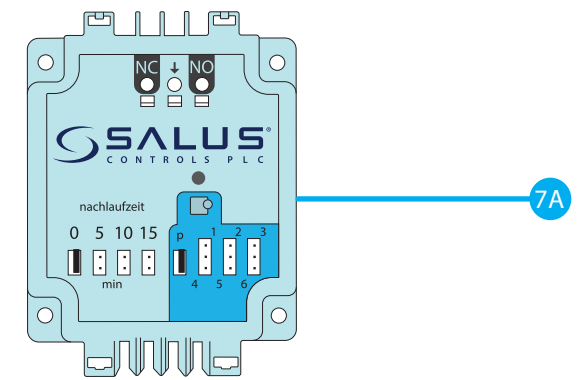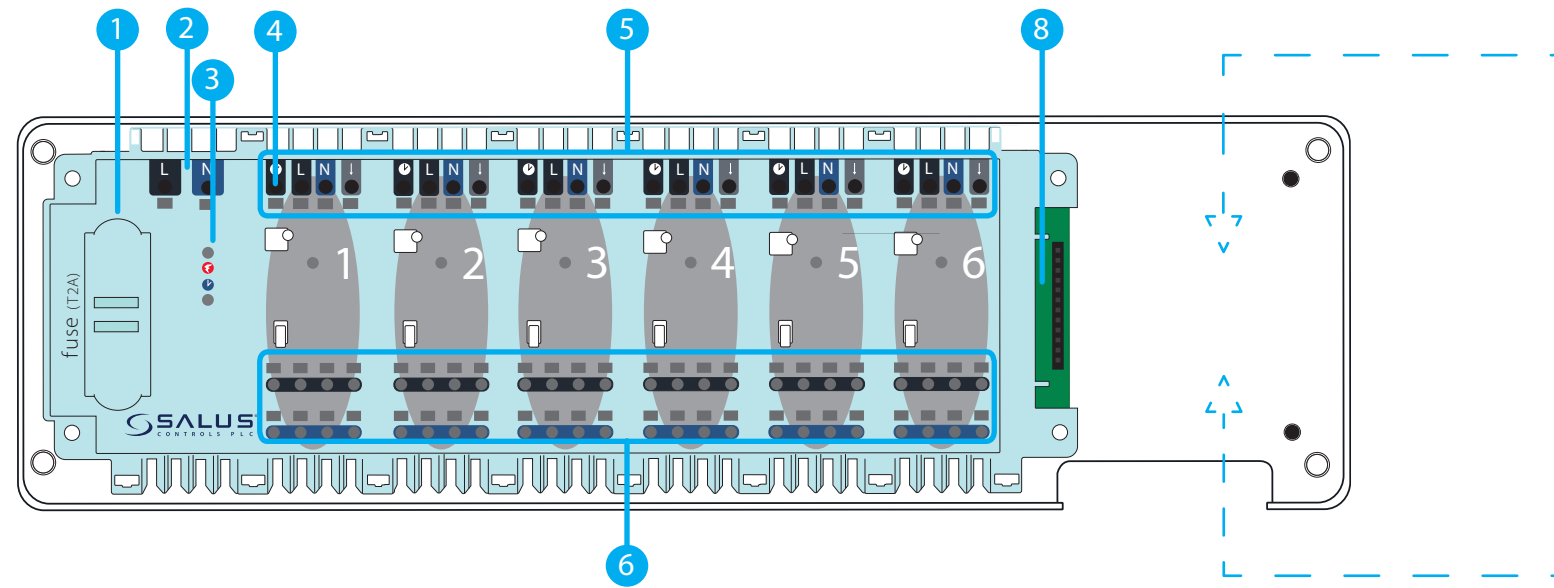

OR

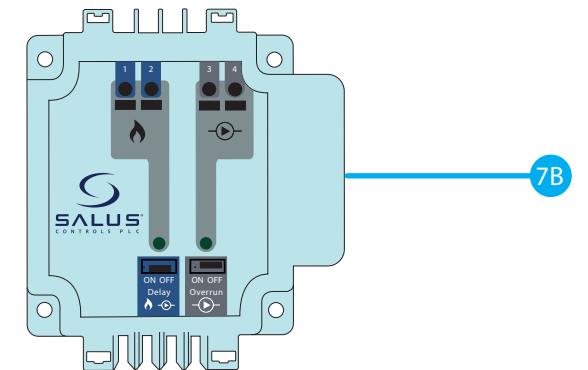

Introduction

Wired KL06 230V wiring centre allows easy and quick connection of thermostats and actuators.
It has a serial connector for additional modules (sold separately):

- PL06 Pump or boiler control module
 - PL07 Pump and boiler control modul
- The KL06 230V wiring centre is adapted to work with NC type actuators (normally closed)
and maximum 6 thermostats

Product compliance

This product complies with the essential requirements and other relevant provisions of the following
European Directives: GPSR Directive 2023/988/EU, EMC Directive 2014/30/EU, Low Voltage Directive
(LVD) 2014/35/EU, REACH SVHC 253, and RoHS Directive 2017/2102/EU.
The full text of the EU Declaration of Conformity is available at the following web address:
www.saluslegal.com

Safety information

Use in accordance to national and EU regulations. Use the device as intended, keeping it in dry
condition. Product for indoor use only. Installation must be carried out by a qualified person in
accordance to national and EU regulations.

Before any of operation related to power supply (connecting wires, installing the device, etc.),
make sure that KL06 is not connected to any power source. Installation must be carried out
by a qualified person. Incorrect connection of the wires may cause damage to the wiring centre.
The KL06 can not be used in conditions of water vapor condensation neither exposed to water

Technical information

Power supply	230 V AC 50 Hz
Maximum load	2 (1) A
Outputs	Terminals for actuators (230 V)
Dimensions [mm]	300 x 86 x 63


1. Fuse

Note: Only replace the fuse when the wiring centre is disconnected from the
power supply (230 V ~).

Main fuse is located under the housing cover next to power supply terminals and secures the wiring
centre and the devices connected to it. Use cartridge fuses (5x20 mm) with nominal max current 2 A.
To replace fuse remove the fuse holder with a flat screwdriver and pull out the fuse.

2. Power supply

Power supply for wiring centre is 230 V ~ 50Hz.

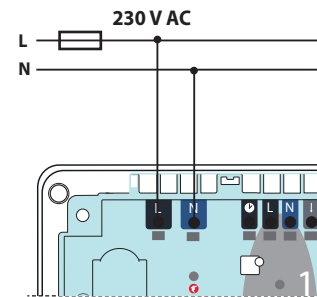

- Features:
- two-wire installation,
 - manufactured in accordance with
the applicable regulations.

3. LED diodes


- green LED diode indicates power supply connection (230 V AC)
- orange LED diode indicates NSB function being activated

4. NSB (Night Set Back reduction) function


NSB function is activated in non-programmable Salus thermostats of the Expert NSB, HTR, BTR series
via external signal. NSB 230 V signal (night-time temperature reduction) is sent via an external
timer or programmable thermostat connected to the KL06 wiring centre. Non-programmable
thermostats are receiving NSB signal and reducing setpoint temperature (by switching to eco mode).
All thermostats have to be connected using a 4-wire cable (min. 4 x 0,75 mm²
, max. 4 x 1,5 mm²).

5. Thermostats connection


- Connecting EXPERT NSB, HTR or BTR series thermostats with the NSB function

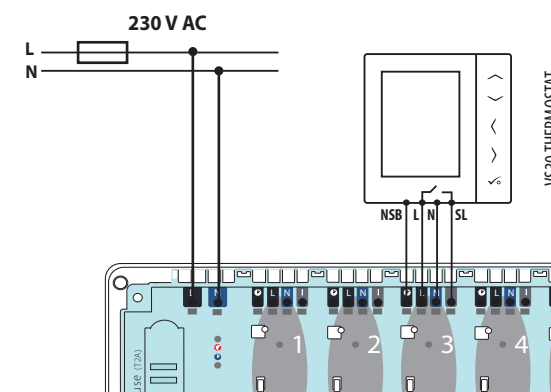

- Connecting a 230 V thermostat to the KL06NSB wiring centre (e.g. RT200)

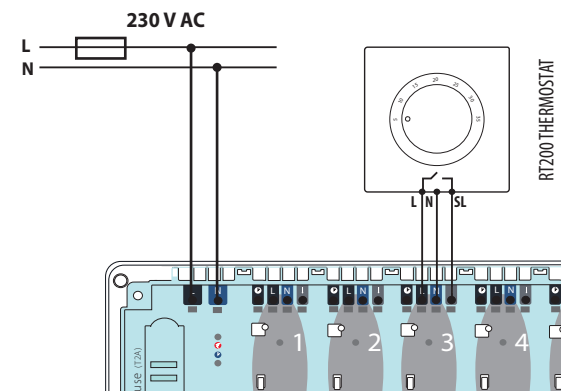


- Connecting ON/OFF battery-powered thermostat with voltage-free COM / NO output contacts
(e.g. 091FL, RT310, RT510)

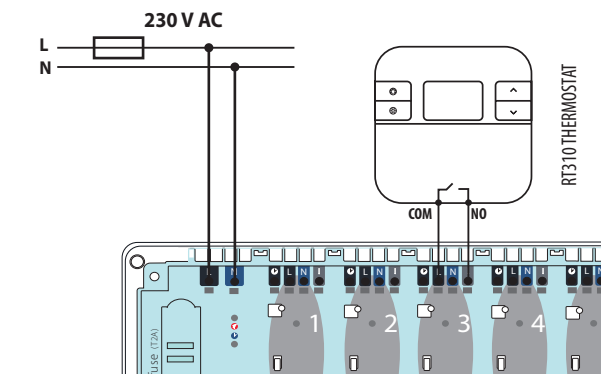

Note: In NSB, HTR, ERT, BTR product series follow interchangeable signifying:
↑ = SL
○ = NSB

6. Actuators connection

The actuator wires should be secured with the self locking connectors in the appropriate zone. Up to
6 actuators with a load of up to 2 Watts each can be connected to a single zone. Should more than
6 actuators be required in a zone use an additional relay to relieve the output.

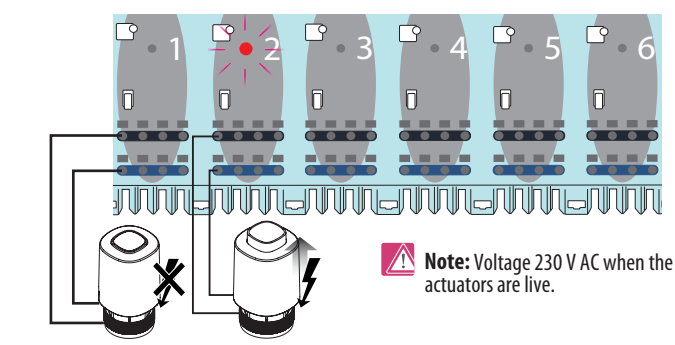

Example based on the T30NC 230 V actuators

7 A. PL06 – pump (or boiler) control module

PL06 module is used to control the pump (or boiler) using volt-free NC/COM/NO contacts. When any of thermostats connected to the KL06 230 V reports heat demand, COM/NO contacts are closing. COM/NO contacts are opening, when thermostats connected to the wiring centre will stop sending signal for heating.

Jumpers 0-15

These are used to set in minutes the delay time (overrun time). Default setting is „0“

0

5

10

15

min

0-15 values specify the time in minutes. E.g. when jumper is set to value „0“, COM/NO output will turn off as soon as the thermostats stop calling for heat. If jumper will be set to the value „10“, the module will turn off 10 min after the thermostats stop calling for heat.

Jumpers P,1,2,3,4,5,6

They are used to select the zone which turns on the module. Default setting is „P“

P

1

2

3


4

5


6

P - All zones activate the module
1, 2, 3, 4, 5, 6 - select the specific zone which turns on the module

PUMP CONTROL

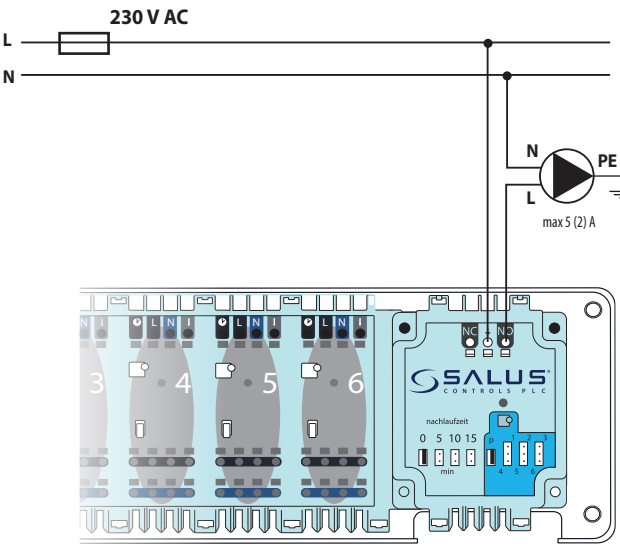

BOILER CONTROL

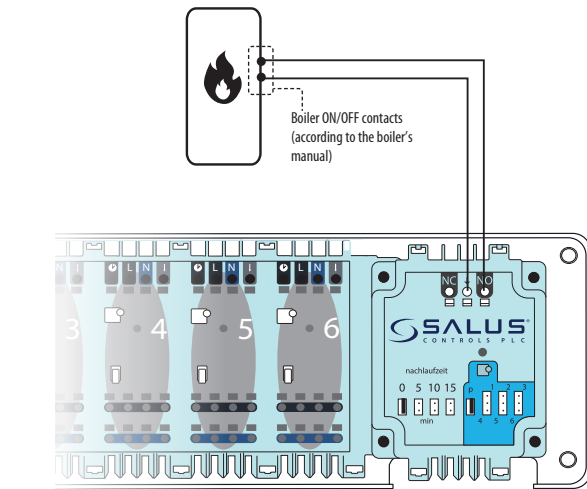

Power supply	from the KL06 wiring centre
Maximum load	5 (2) A
Outputs	NO/COM/NC relay
Dimensions [mm]	60 x 80 x 20

7 B. PL07 – pump and boiler control module

PL07 module is used to control the pump and the boiler using volt-free COM/NO contacts. When any of thermostats connected to the KL06 230V reports heat demand, COM/NO contacts are closing. COM/NO contacts are opening, when thermostats connected to the wiring centre will stop sending signal for heating.

ON-OFF delay jumper

Is used to activate the delay output for the pump and boiler. Default is „ON“

ON

OFF

Delay

ON

OFF

Delay

- „ON“ position activates the pump and boiler outputs with a delay of 3 minutes after the heating signal is supplied from any of the thermostats connected to the wiring centre.
- „OFF“ position causes immediate activation of the pump and boiler outputs.

ON-OFF Overrun jumper

Is used to activate the delay output for the pump when heating is satisfied. Default is „ON“

ON

OFF

Overrun


ON

OFF

Overrun

- „ON“ position turns OFF the pump output with a delay of 3 minutes when all thermostats stop calling for heat.
- „OFF“ position immediately turns OFF the pump output when all thermostats stop calling for heat.


PUMP AND BOILER CONTROL

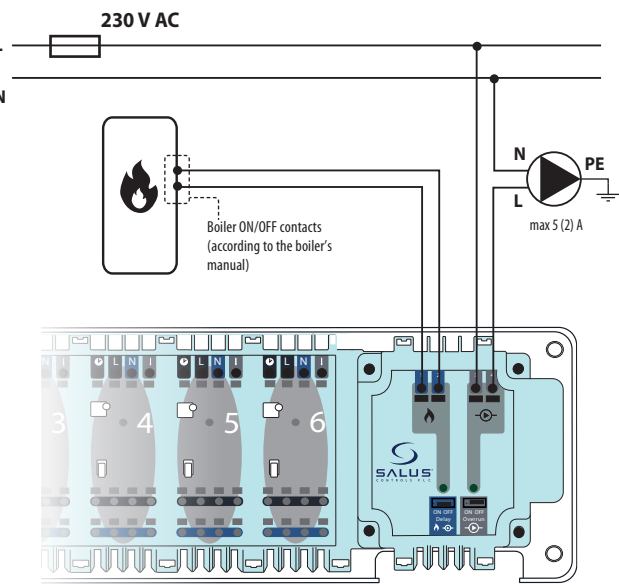

Power supply	from the KL06 cable distribution centre
Maximum load	5 (2) A
Outputs	2 x NO/COM relays
Dimensions [mm]	70 x 80 x 20

8. Serial connector for PL06 and PL07 modules

It provides communication between the KL06 wiring centre and the PL06/PL07 modules. KL06 wiring centre + PL06/PL07 module increases functionality and additionally makes possible to control pump and/or boiler. PL06/PL07 module is powered from the wiring centre.

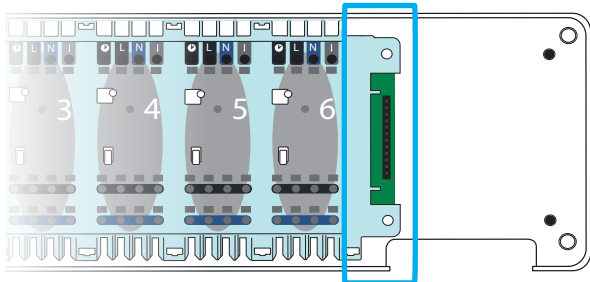

INSTALLATION

1

Remove the top cover of the wiring centre.

2

Unscrew the main housing (see picture)

3

Mount the back side of the housing to the wall. When mounting on a DIN rail, open the hooks on the back of the housing.

4

Remove the appropriate pices of insulation from the wires.

Wires for the pump and boiler control
(min. 2 x 0,75 mm² 230 V
max. 2 x 1,5 mm² 230 V)

Wiring centre power supply
(min. 2 x 1,0 mm² 230 V
max. 4 x 1,5 mm² 230 V)

Thermostats wires
(min. 4 x 0,75 mm² 230 V
max. 4 x 1,5 mm² 230 V)

5

Thread the wires under the mounting belt in the back part of the wiring centre.

6

Thread the wires through the slots in the top part of the wiring centre and connect it to the terminals.

7

Adjust the wires and screw the main housing of the wiring centre to the rear housing.

8

Connect the thermoelectric actuators wires.

9

Make sure that all the wires are properly connected, mount top cover and power up the wiring centre - the green "Power" indicator LED will illuminate.

Set includes supplementary accessories (to support installation proces).

LN

1

2

3

4

5

6

INSTALLATION OF THE ADDITIONAL MODULE PL06 OR PL07 ON THE EXAMPLE OF PL06 MODULE

1

Remove the top cover of the wiring centre.

2

Connect the PL06 or PL07 module to the serial connector.

3

Check that all the wires are correctly connected, fit the top cover and switch on the wiring centre – the green "Power" LED will light up.

Note: Before connecting PL06/PL07 module, disconnect the main power from the KL06 wiring centre