


# iT600 Coordinator Update Software Installation Guide

## 1. Download Instructions

- Access official download portal: <https://saluscontrols.com/de/hilfe-und-downloads/>
- Navigation path: Downloads → Coordinator Tools → SALUS\_EU\_Coordinator\_Upgrade\_Tool\_er\_boxed.exe
- File Verification:
  - Filename: SALUS\_EU\_Coordinator\_Upgrade\_Tool\_er\_boxed.exe (Windows)
  - SHA-256: 7a3b8d... (MAC)

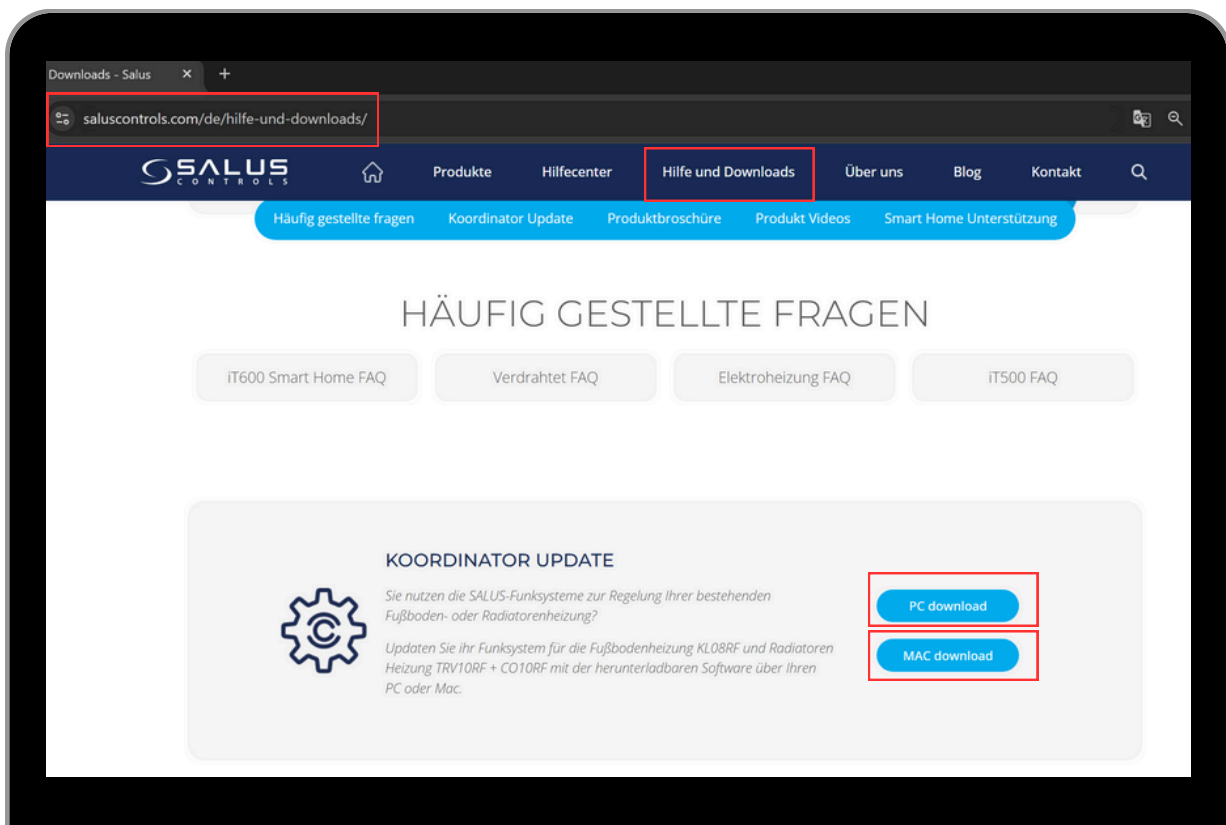


- File Details: SALUS\_EU\_Coordinator\_Upgrade\_Tool\_er\_boxed (Windows Installer Package)

# iT600 Coordinator Update Software Installation Guide

## 2. Installation Procedure


### Windows:

1. Disable antivirus temporarily (optional but recommended)
  - Run installer as Administrator:


 SALUS\_EU\_Coordinator\_Upgrade\_Tool\_er\_boxed

2. Follow installation wizard:


**Welcome Screen:** Click **Next** →

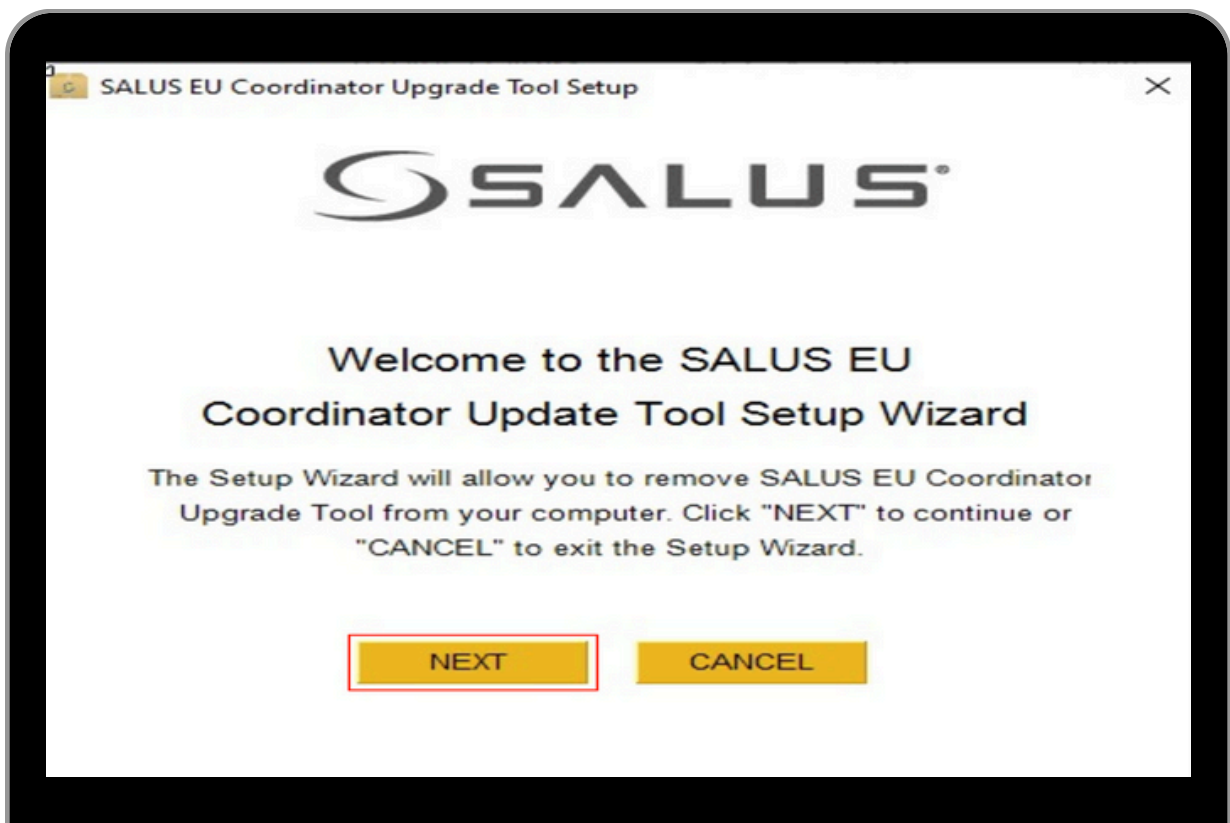

**Installation Confirmation:** Click **Install** →

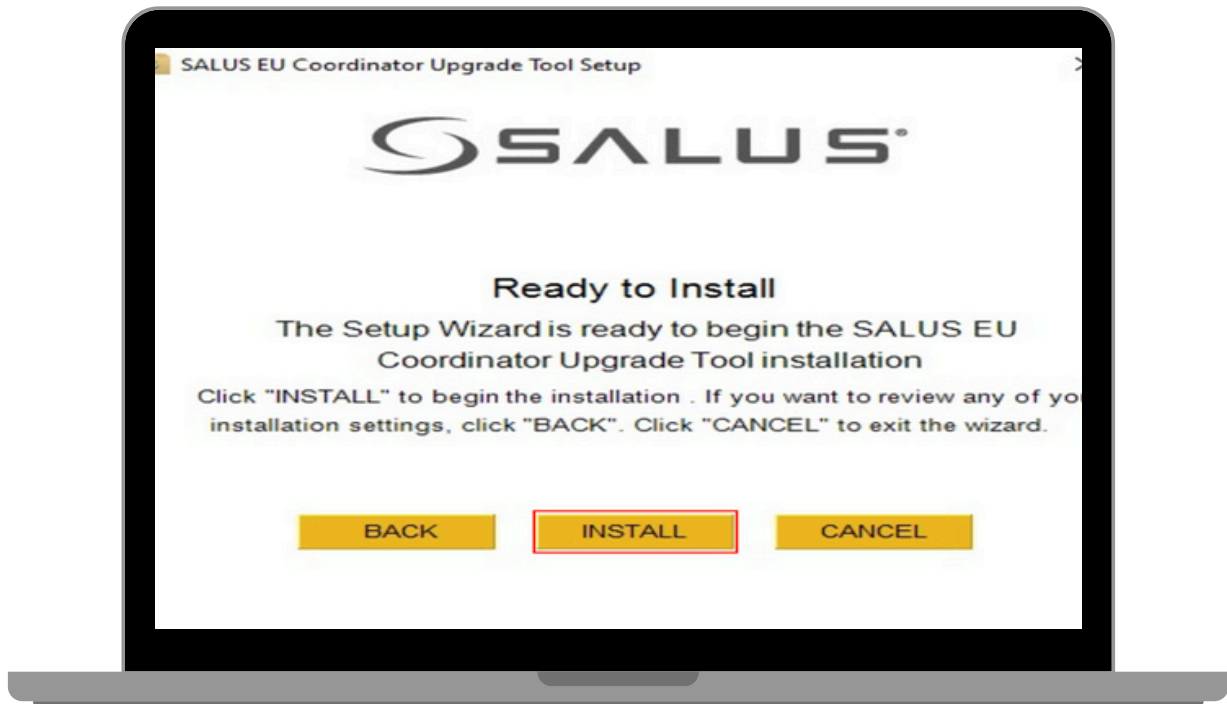


**Progress:** Wait for completion →

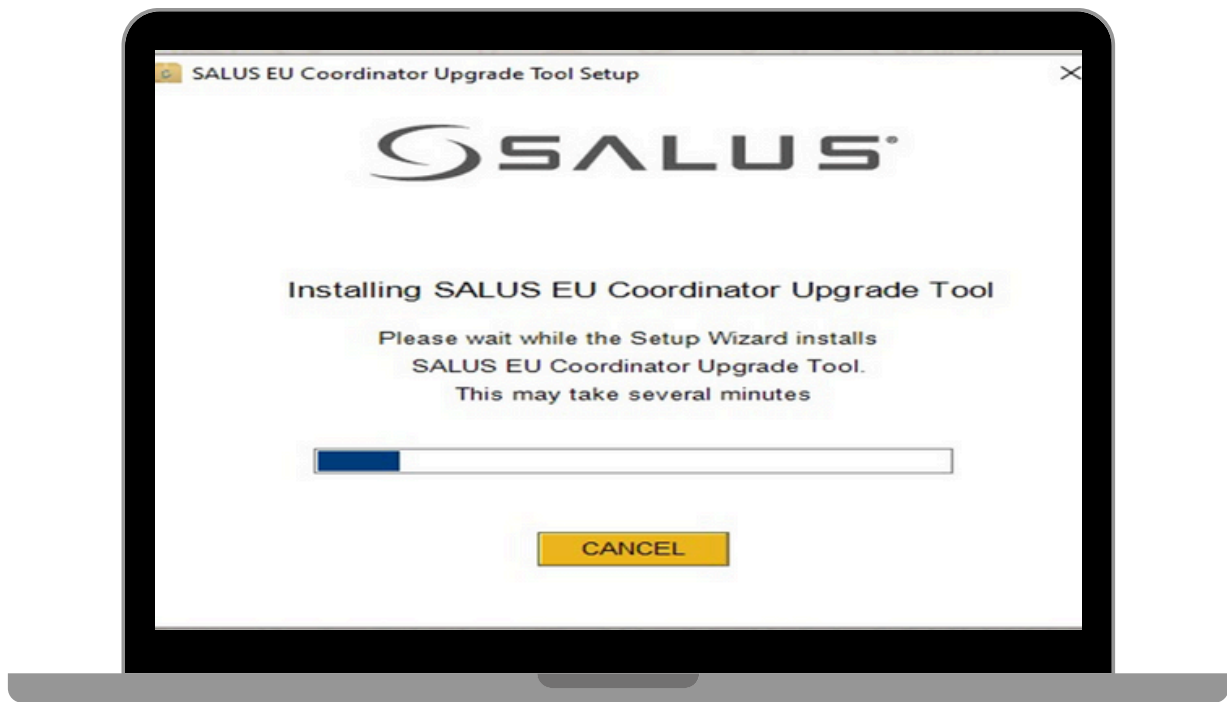

### Finalize setup:

- Click the **"Finish"** button to exit the Setup Wizard and launch the Tool from desktop.
- Click **"Run"** button to launch Salus EU Coordinator Upgrade Tool.

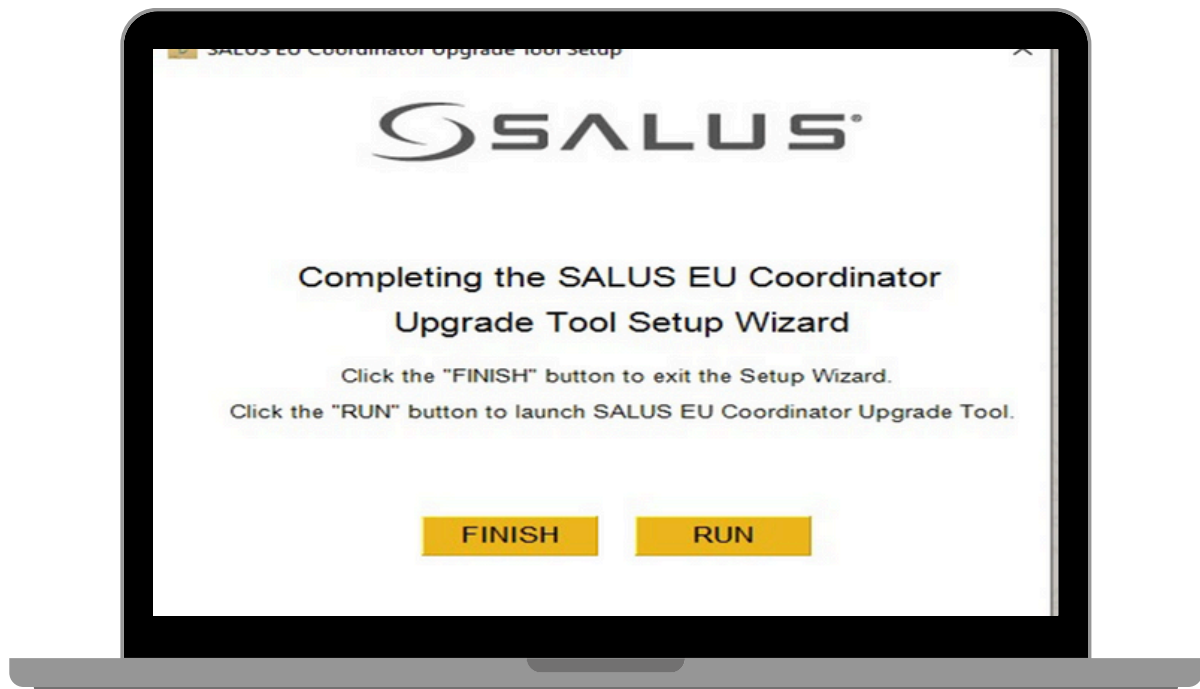


## macOS:

1. Right-click .dmg → Open (bypass Gatekeeper)
2. Drag icon to Applications folder

## 3. Launching the Tool

- Open via desktop shortcut or Start menu.
- Initial Interface: Ensure the coordinator is disconnected at this stage.

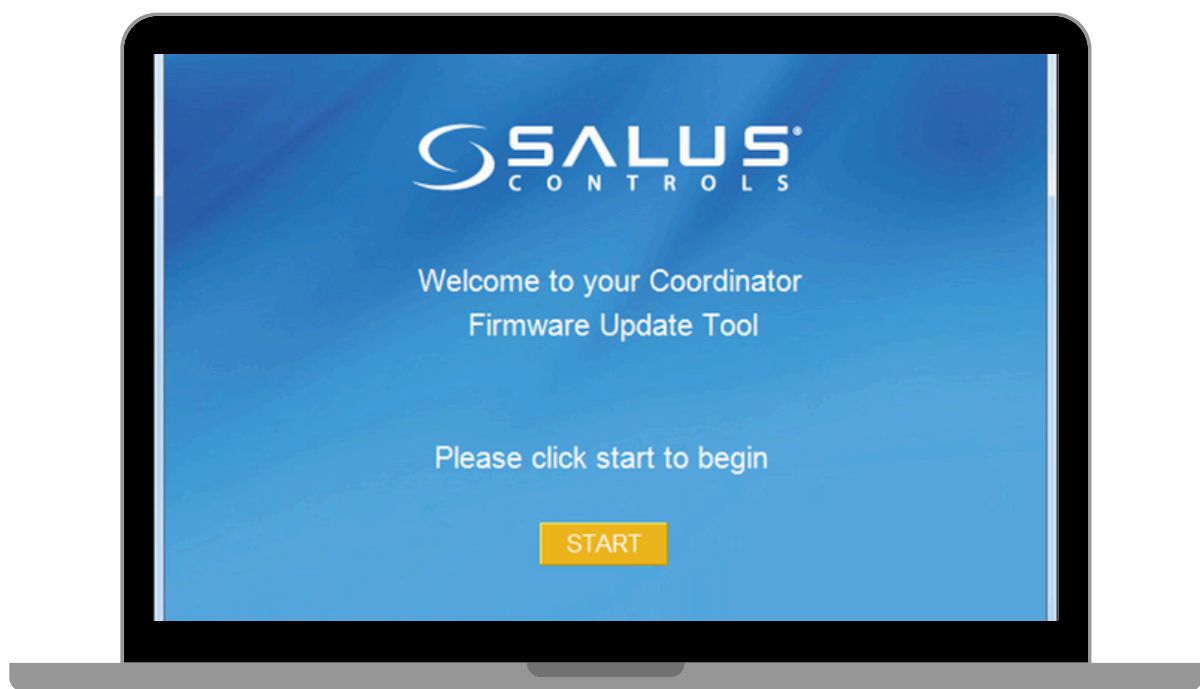

## 4. App Update Process – iT600 Coordinator Update Tool

### 1. Version Check:




### 2. Update Initiation:

- Click **Update**




### 3. Progress Monitoring:

- Coordinator Update Tool is downloading and updating.

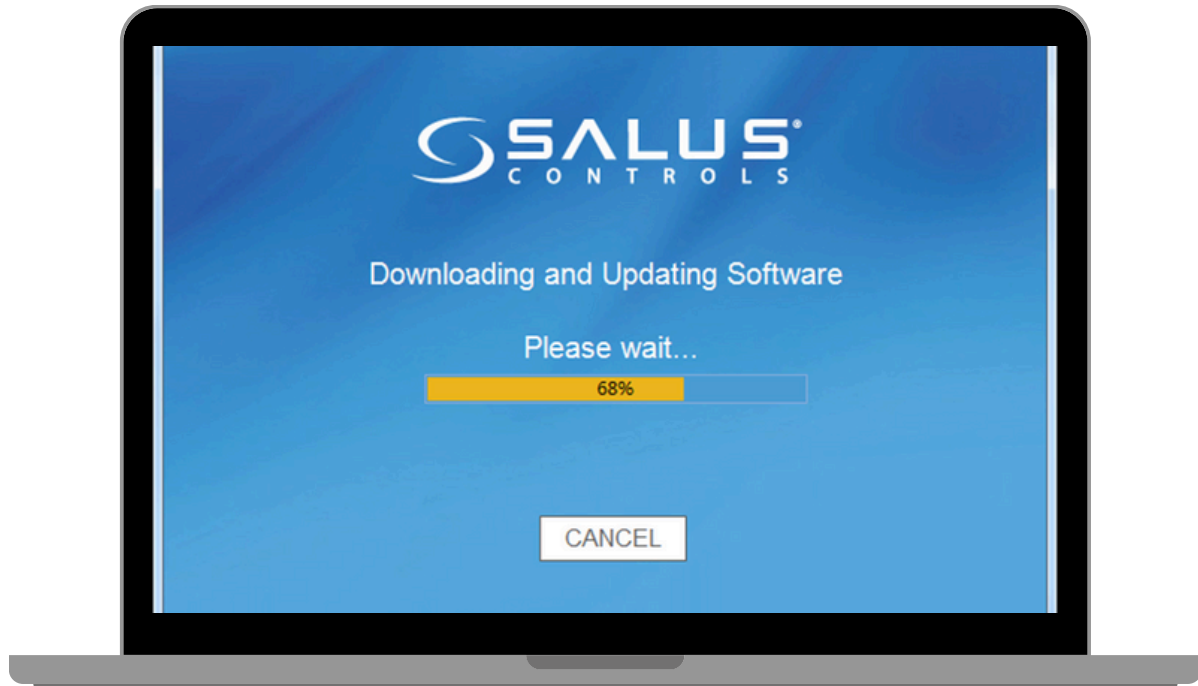

### 4. Completion:


- "Update successful!" message appears.

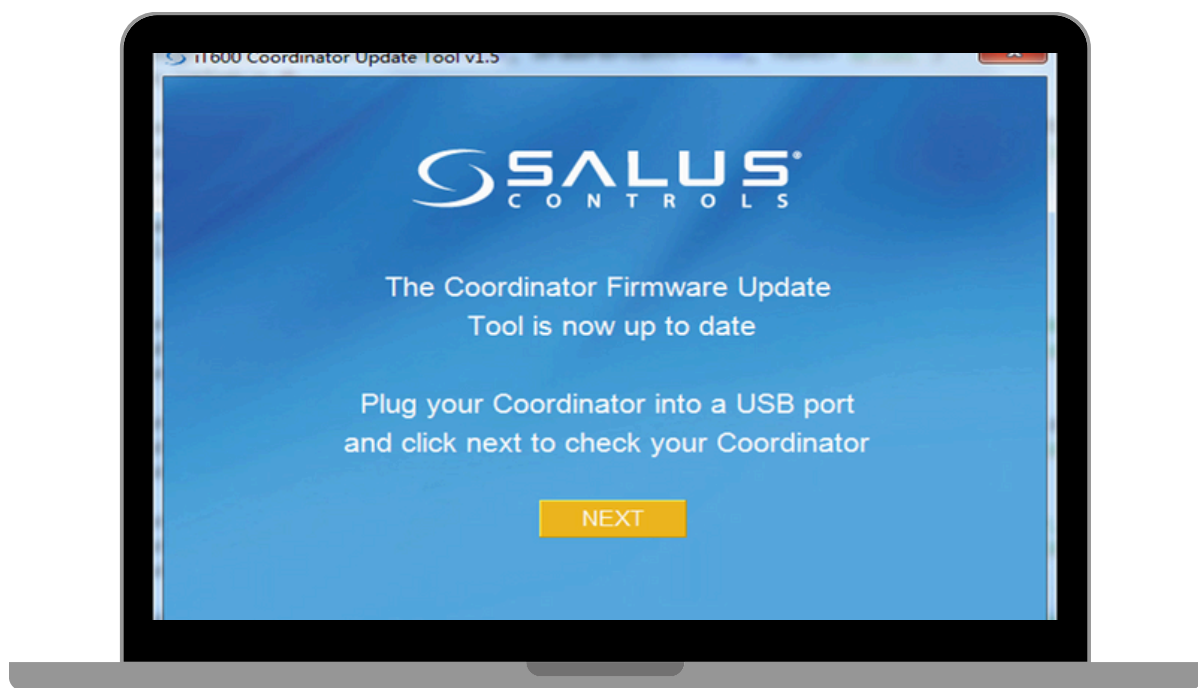


## 5. Firmware Update Process - Updating the coordinator

### 1. Version Check:

- Ensure that Bluetooth is disabled on laptop/PC. Open Windows Settings → Bluetooth & devices → Toggle Bluetooth OFF.
- Plug the Coordinator into a USB port.
- Click **NEXT** to check Coordinator.

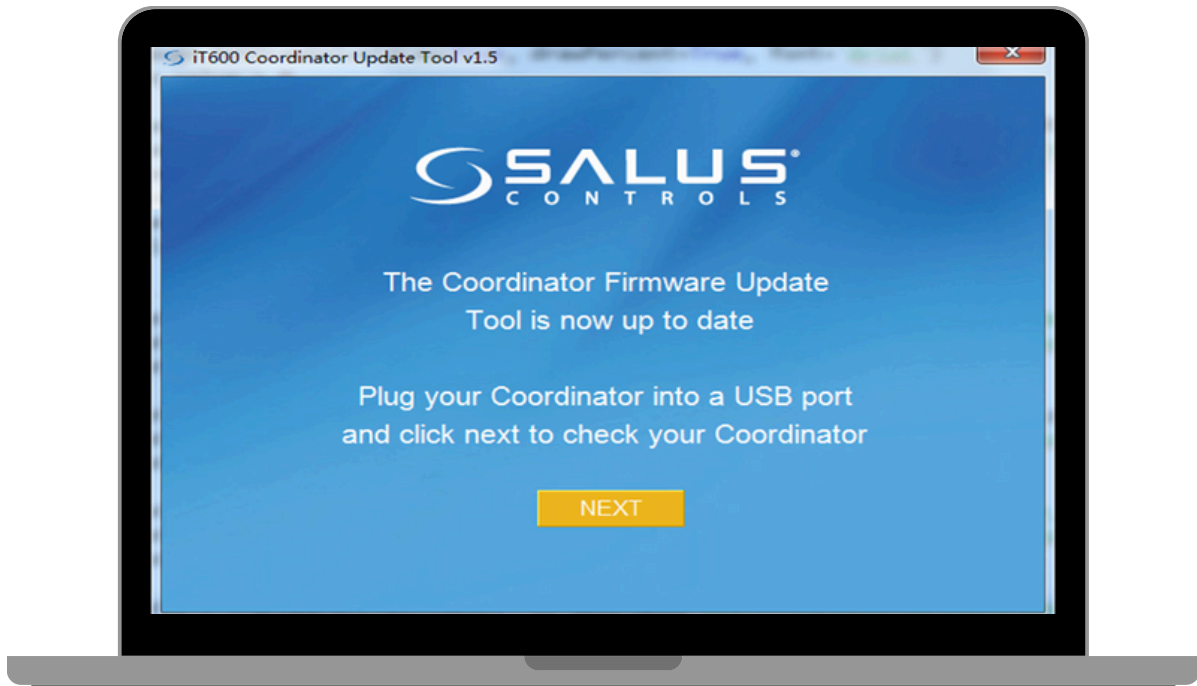


- If Bluetooth is disconnected and CO10 is not found, please click Install Driver.

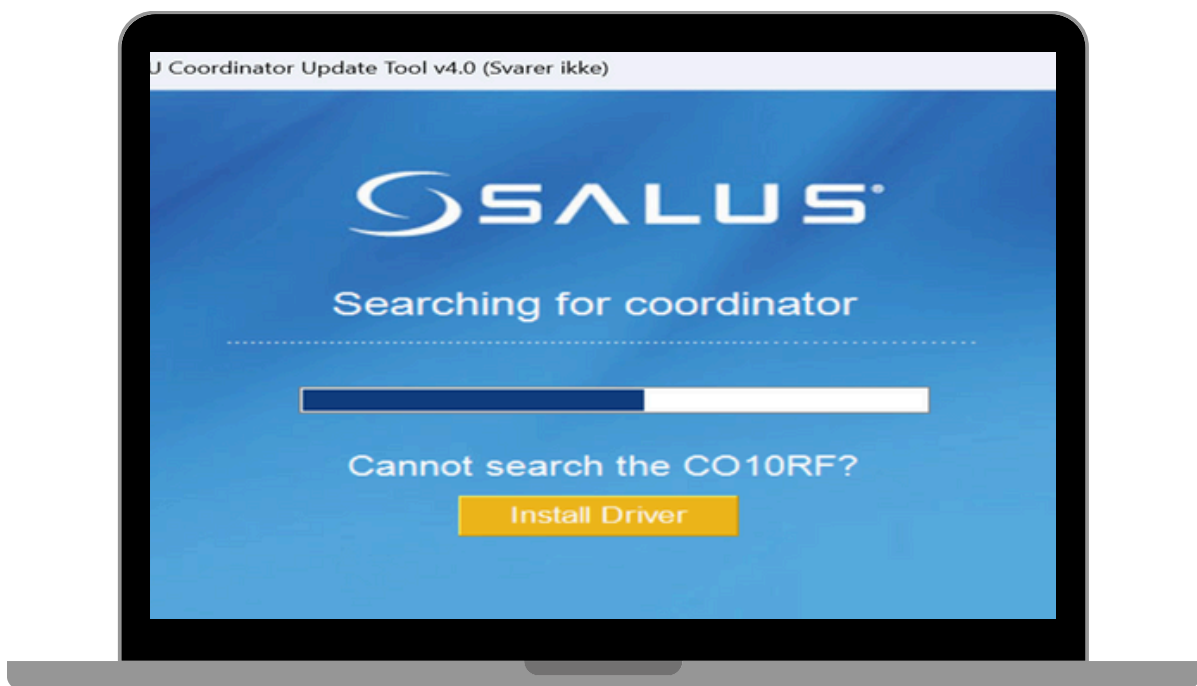

## 2. Update Initiation:

- Click **Update**

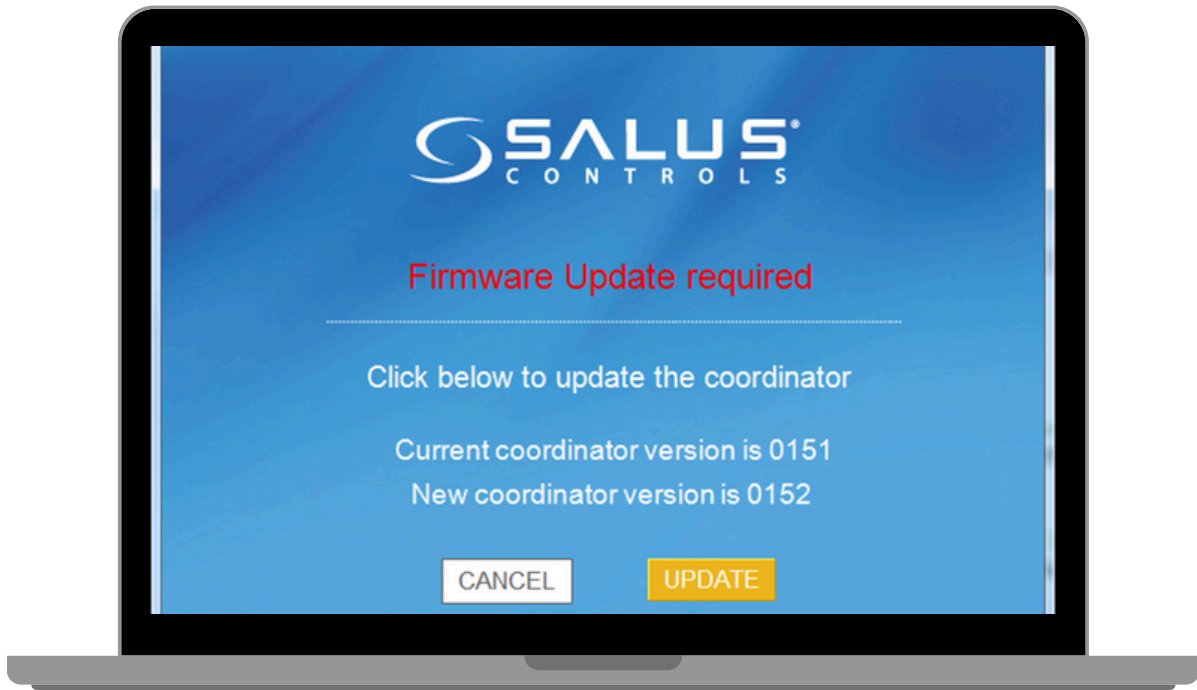

## 3. Progress Monitoring:

- Critical! Removing the coordinator or switching your computer off will cancel the update.



#### 4. Completion:

- "Update successful!" message appears.
- Coordinator reboots automatically.



## 6. Key Troubleshooting Steps

**Issue:** COM port conflicts (e.g., COM5/COM6 appear but tool fails).

**Solution:**

1. Disable Bluetooth: Open Windows Settings → Bluetooth & devices → Toggle Bluetooth OFF.
2. Check COM ports: Open Device Manager → Ports (COM & LPT). Verify if COM5/COM6 disappeared.
3. Relaunch tool: If conflicting ports vanished, reconnect coordinator and retry update.

### Error-Specific Solutions

Error Message	Resolution Steps
"Signature verification failed"	Re-download installer (file corruption)
"Update timed out"	Disable firewall/VPN → Retry in Safe Mode
Application crash on launch	Install latest .NET Framework + VC++ Redist