

**GGPC1
MAINS SWITCH**
QUICK GUIDE



Producer:
SALUS Controls plc
Units 8-10, Northfield Business Park, Forge Way,
Parkgate Rotherham, S60 1SD, United Kingdom


Importer:
Salus Controls European Distribution sp. z o.o.
ul. Szamocka 8, piętro 6., 01-748 Warszawa, Poland

UK: tech@salus-tech.com
DE / NL: info@salus-controls.de
PL: poland@saluscontrols.com
FR: technicalsupport@saluscontrols.fr
RO: tehnic@saluscontrols.ro
DK: Support@salus-controls.dk



www.saluscontrols.com

SALUS Controls is a member of the Computime Group. Maintaining a policy of continuous product development SALUS Controls plc reserve the right to change specification, design and materials of products listed in this brochure without prior notice.

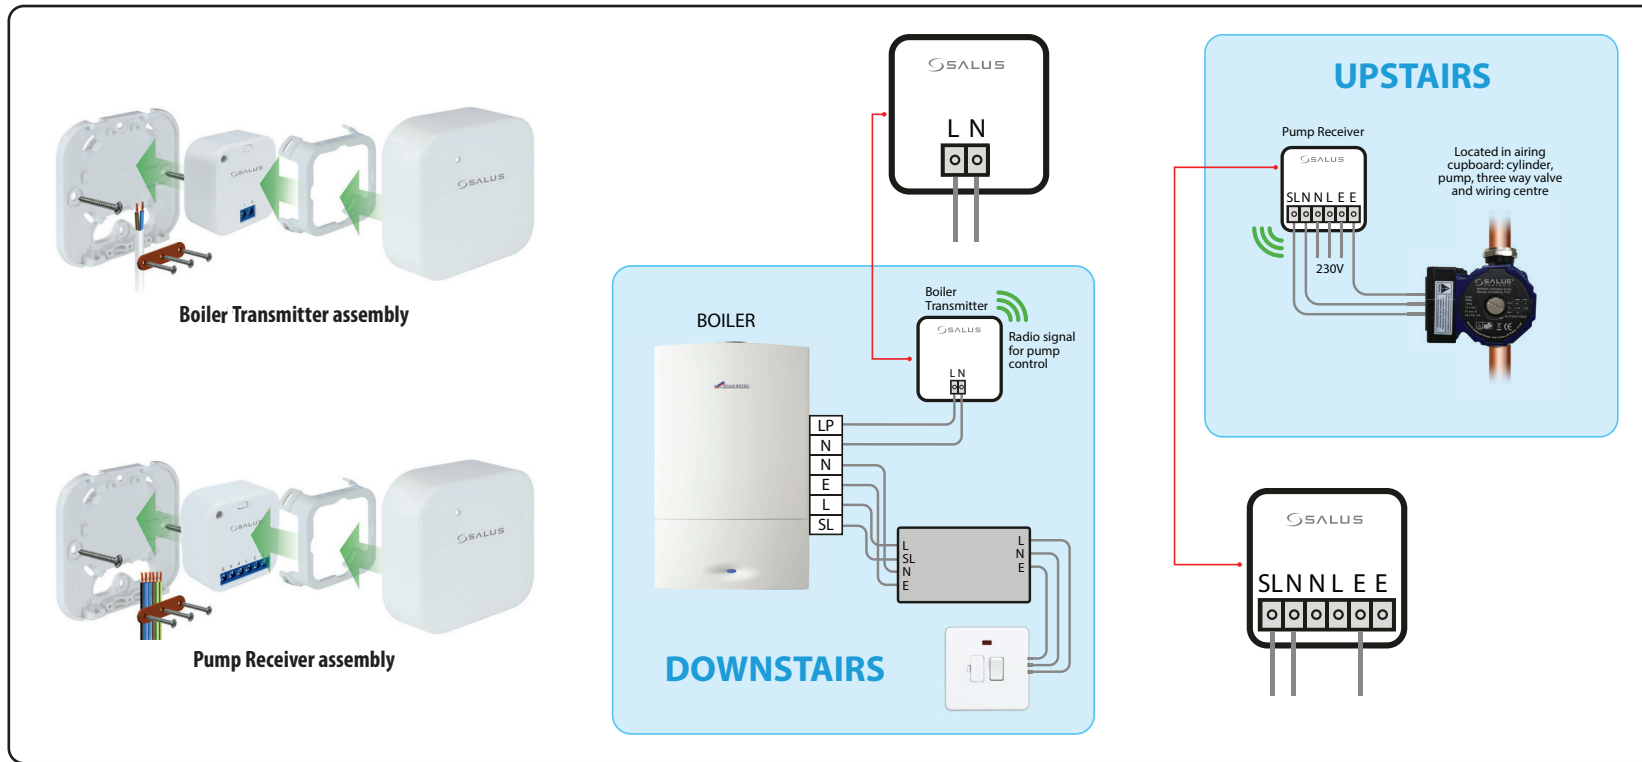

Introduction

Mains Switch is an RF solution to switch ON or OFF a Heating Ventilation and Air Conditioning (HVAC) pump under direct control from the boiler.

Product Compliance

This product complies with the essential requirements and other relevant provisions of Directives GPSR 2023/988/EU, RED 2015/183/EU, EMC 2014/30/EU and RoHS 2017/2102/EU. The full text of the EU Declaration of Conformity and the PSTI Statement of Compliance are available at the following internet address:
www.saluslegal.com

Safety Information

Use in accordance with the regulations. Indoor use only. Keep your device completely dry. Disconnect your device before cleaning it with a dry cloth. This accessory must be fitted by a competent person and installation must comply with the guidance, standards and regulations applicable to the city, country or state where the product is installed. Failure to comply with the relevant standards could lead to prosecution.

Utility

The pump is not normally located close to the boiler, in which case a mains cable must be run from the boiler to the pump. Using Mains Switch eradicates the need for cabling.

i The relay can be used in other similar applications (with other devices).

RF Communication

Range:

- approximately 100 metres in open space
- typical indoor range: 35 metres (depends on the indoor structure)

Ⓜ 868.0–868.6 MHz; <13 dBm


Pairing code

The Boiler Transmitter and the Pump Receiver will share one unique factory pre-matched 3-byte pairing code. The number of combinations (16,777,216) ensures no adjoining units should share the same pairing code.

Components

Mains Switch consists of two units:

1. The Boiler Transmitter
 2. The Pump Receiver
- Also included are two mounting brackets for each unit.

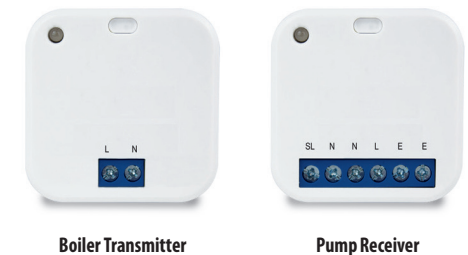

Boiler Transmitter

Pump Receiver

The Boiler Transmitter

The Boiler Transmitter is connected to the boiler which both powers the unit and detects the presence of the 230VAC pump signal output from the boiler.



Terminals

Please wire the Boiler Transmitter in accordance with the wiring diagram below:

| | |
|----------|---------|
| L | Live |
| N | Neutral |

Temporary power backup

The Boiler Transmitter uses a super capacitor to backup power in order to transmit an OFF command twice at 5 second intervals, when it detects the boiler output off.

Device Function

Normal Mode

The Boiler Transmitter keeps detecting the 230VAC input.

When 230VAC is detected, an RF ON signal is transmitted to the RF Pump Receiver and repeated every 5 seconds.

When power is removed from the Boiler Transmitter, a temporary power backup (Super Capacitor) will be used to transmit an OFF command twice at 5 second intervals.

Pairing Mode

The Boiler Transmitter keeps broadcasting pairing code every 5 seconds until 60 seconds timeout.

Button Operation & LED Indicator

| Button operation | LED State | Description |
|--|--------------|--|
| Press the button 3 times within 1 second | Orange Flash | When the user presses the transmitter button 3 times within 1 second, the transmitter will send the pairing information at 5-second intervals for one minute. The transmitter LED will flash orange (red/green ON) at 0.5 Hz for one minute. |
| N/A | Green On | The LED will be lit green when the unit is powered. |
| N/A | Red On | The LED will be lit red for 1 minute when the unit is powered off. |

The Pump Receiver

The Pump Receiver keeps listening for the RF ON/OFF signal. The pump will be switched ON when an RF ON signal is received. The Pump Receiver will switch off the pump upon receiving an OFF command or if an ON command is not received within 21 seconds.



Terminals

Please wire the Boiler Transmitter in accordance with the wiring diagram below:

| | |
|-----------|-----------------|
| SL | Switch Live out |
| N | Neutral out |
| N | Neutral input |
| L | Live Input |
| E | Earth |
| E | Earth |

Device Function

Normal Mode

The Pump Receiver keeps listening for the RF ON/OFF signal.

The Pump will be switched ON when an RF ON signal is received.

Once switched ON the Pump Receiver will switch OFF the pump upon receipt of an OFF command or if an ON command is not received within 21 seconds (RF Watch Dog).

Pairing Mode

The Pump Receiver keeps listening for the pairing code until the pairing code is received or it will time out after 60 seconds.

The received pairing code will replace the pre-attached pairing code.

Button Operation & LED Indicator

| Button operation | LED State | Description |
|--|--------------|---|
| Press the button 3 times within 1 second | Orange Flash | When the user presses the receiver button 3 times within 1 second, the LED of the receiver will flash orange (red/green ON) at 0.5 Hz for 1 minute, waiting for pairing information from the transmitter. |
| N/A | Green On | The LED will be lit green when the unit is powered and the pump is switched ON. |
| N/A | Red On | The LED will be lit red when the unit is powered and the pump is switched OFF. |